BSD3030

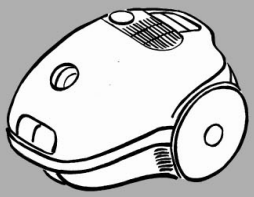

BOSCH

kr 사용설명서
en Instruction manual

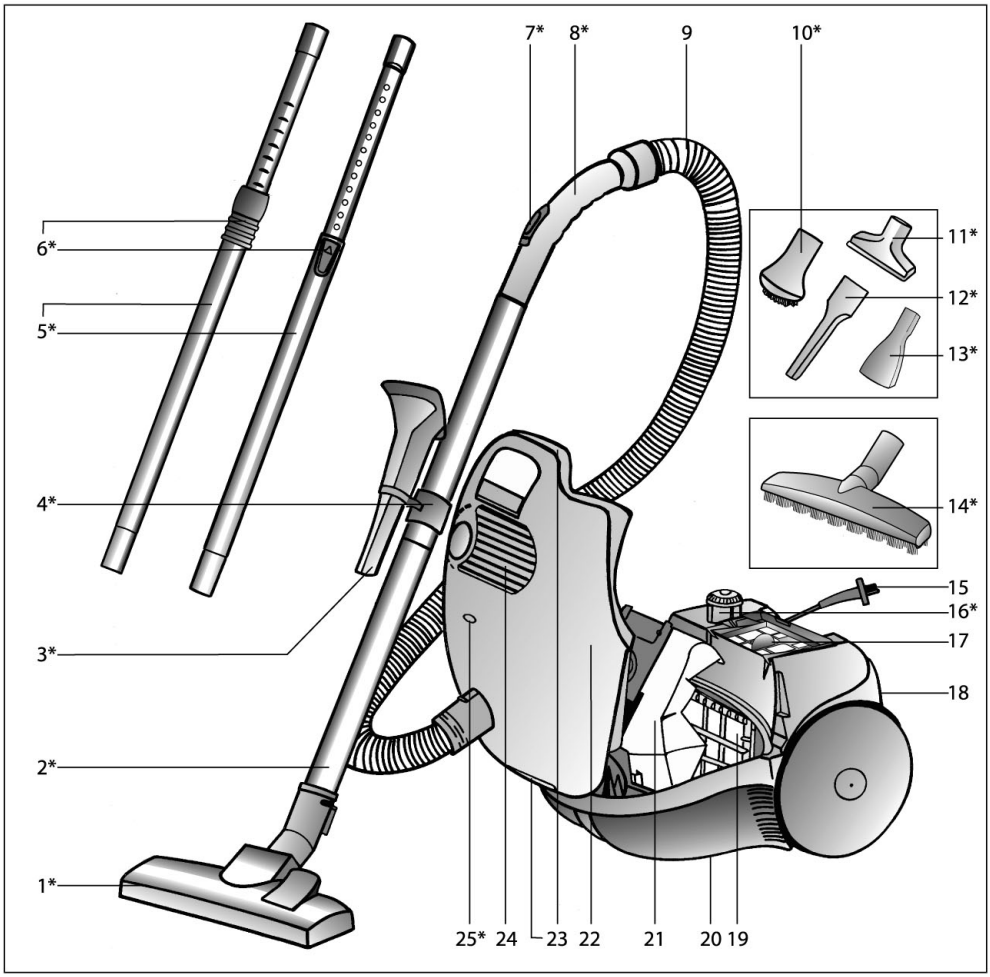
7*
8*
9
10*
6*
5*
4*
3*
2*
1*
11*
12*
13*
14*
15
16*
17
18
25*
24
23
22
21
20
19

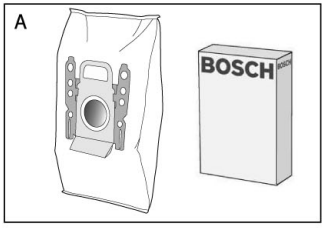
A
BOSCH

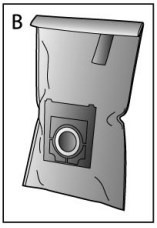
B

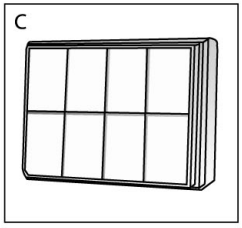
C

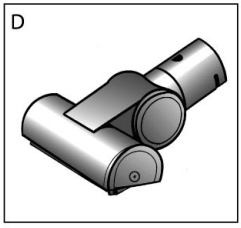
D

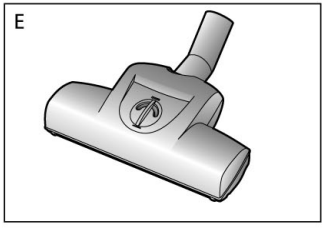
E

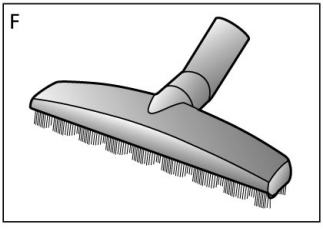
F

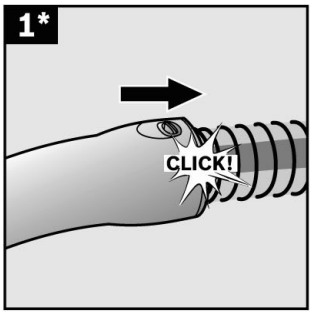
1*
CLICK!

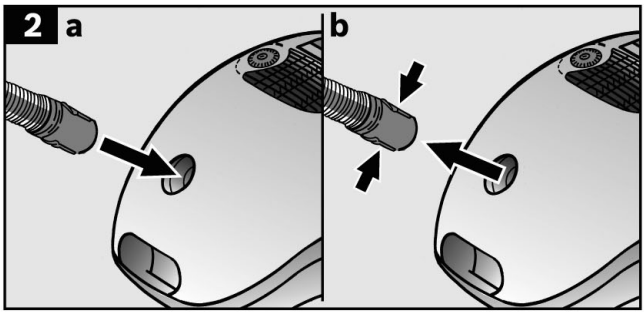
2 a
b

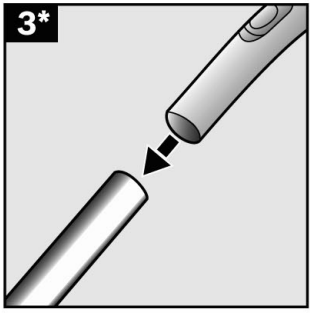
3*

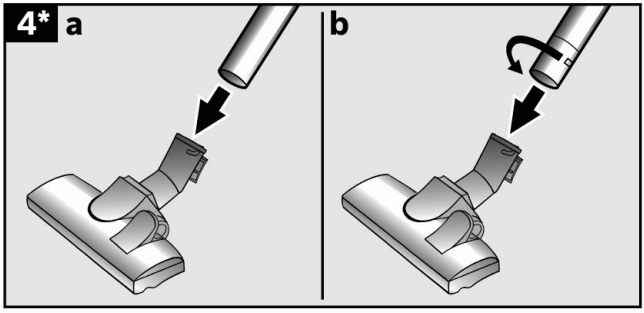
4* a
b

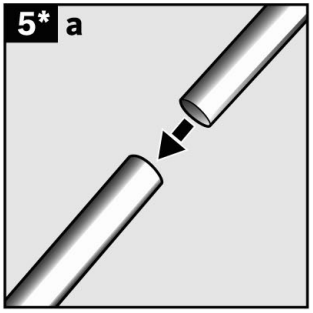
5* a

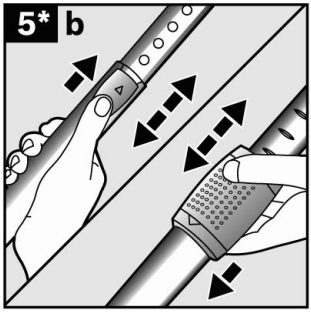
5* b

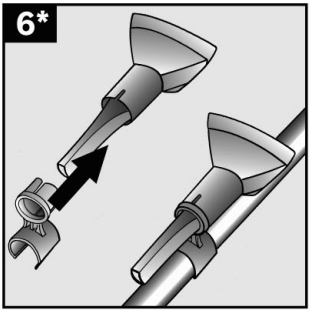
6*

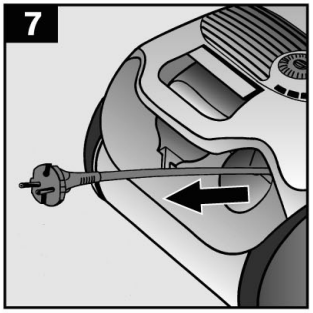
7

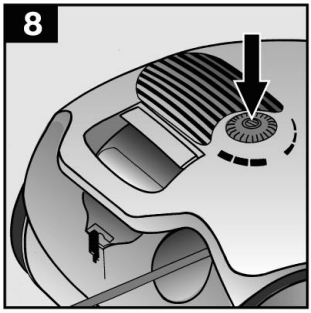
8

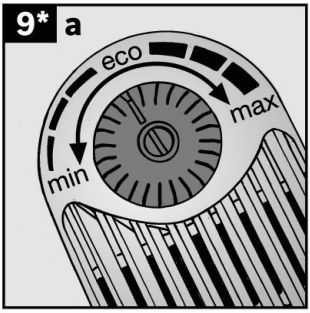
9* a
eco
max
min

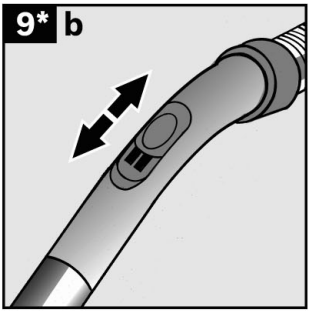
9* b

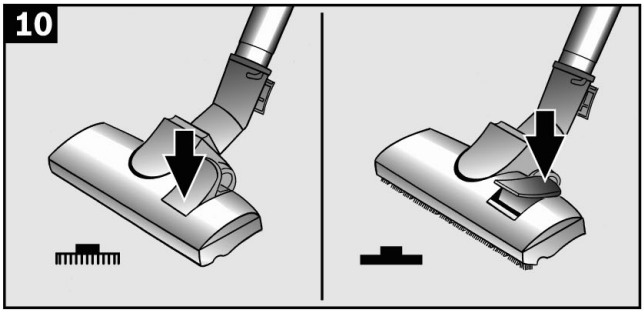
10

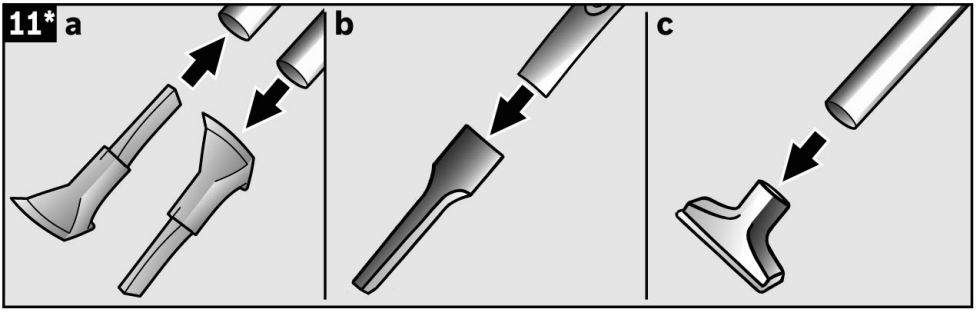
11* a
b
c

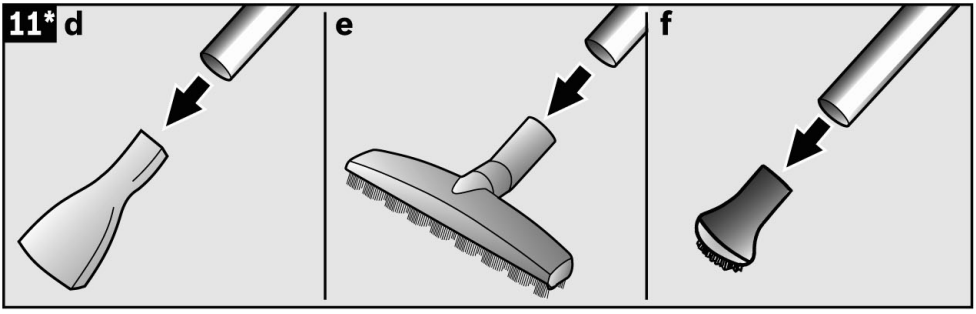
11* d
e
f

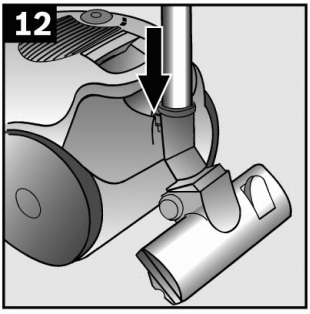
12

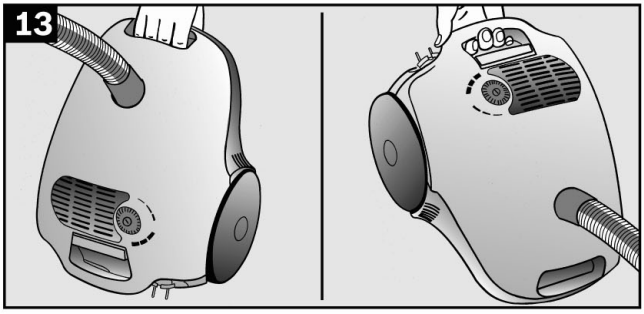
13

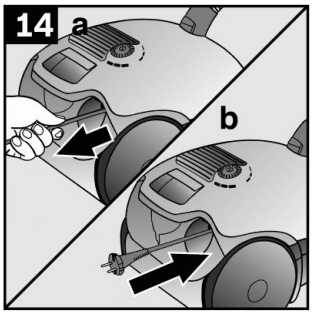
14 a
b

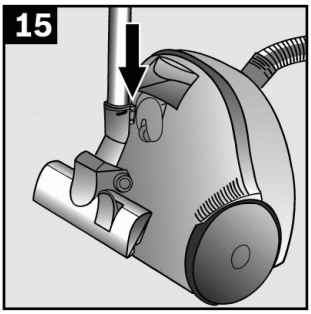
15

16*

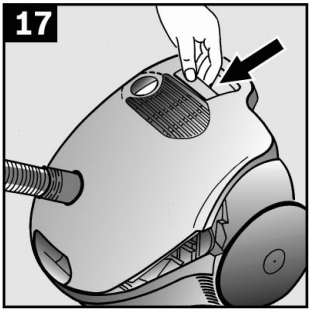
17

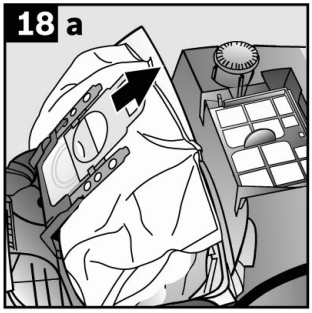
18 a

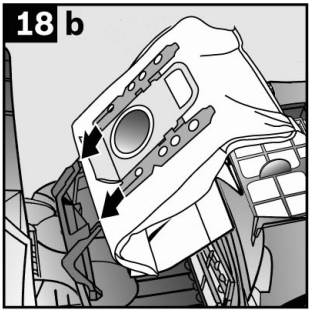
18 b

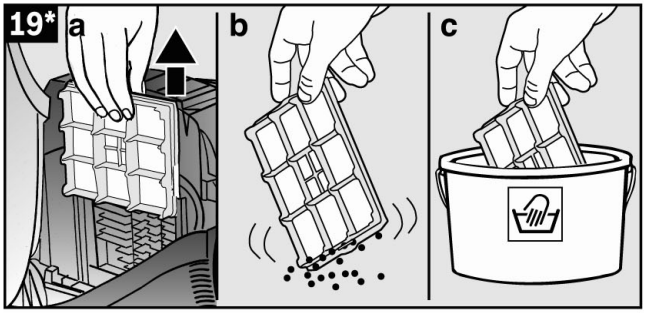
19* a
b
c

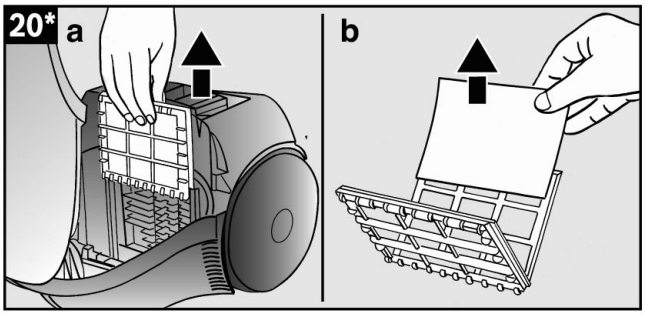
20* a
b

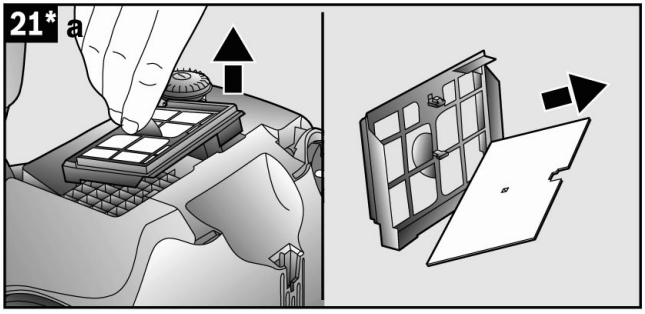
21* a

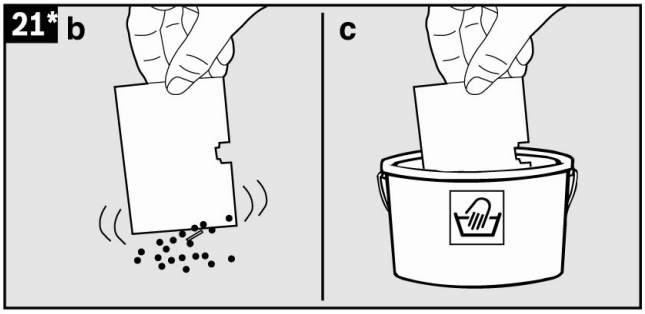
21* b
c

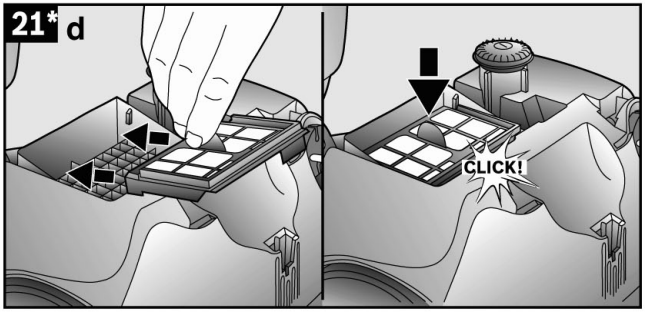
21* d
CLICK!

본 사용 설명서를 잘 보관해 주십시오. 해당 진공 청소기를 타인에게 양도할 경우에도, 본 사용 설명서를 함께 제공하시기 바랍니다.

사용 목적

이 진공 청소기는 산업용이 아닌, 가정용으로 제작되었으며, 사용 설명서의 안내에 따라 사용하셔야 합니다. 부적절한 방법으로 제품을 사용하였거나 주의사항을 지키지 않아 발생한 사고 및 피해에 대해서는 제조사가 책임을 지지 않습니다. 따라서 아래 사항들을 주지하시기 바랍니다.
본 진공 청소기에는:
- 반드시 정품의 교체 부품과 액세서리 또는 특별 액세서리만 사용하십시오.

상해나 피해를 방지하기 위해, 아래의 사항들을 청소하는데 제품을 사용해서는 안 됩니다.
- 사람이나 동물
- 벌레나 거미
- 위험 물질, 날카로운 물체, 고온 또는 불씨가 남은 물체
- 가연성이나 폭발성이 높은 물질 또는 가스
- 난방으로 인해 발생한 재나 그을음
- 프린터와 복사기에서 나온 토너 가루

안전사항

본 진공 청소기는 공인된 기술 원칙 및 관련 안전 규정을 준수합니다.
- 8세 이하의 어린이나 신체적/감각적/정신적 능력이 떨어지는 사람, 혹은 경험이나 지식이 부족한 사람이 이 기기를 사용할 경우에는, 타인의 감독/지시가 있거나 기기의 안전한 사용법을 설명하여 기기 사용에 대한 잠재적 위험성을 인지하여야 합니다.
- 어린이들은 기기를 가지고 장난을 쳐서는 안 됩니다.
- 어른의 감독/지휘가 없는 상황에서 어린이가 제품을 다루어서는 안 됩니다.
- 비닐 봉지와 막(film)은 질식의 위험이 있으므로 폐기 전 아이들의 손이 닿지 않도록 해야 합니다

올바른 사용 방법

- 제품의 라벨에 표시된 사항 대로만 제품을 연결하고 사용해야 합니다.
- 먼지 봉투나 먼지통, 모터 보호나 배기 필터가 끼워지지 않은 상태에서는 제품이 손상될 수 있으니 제품을 사용하지 마십시오.
- 부상의 위험이 있으니 노즐과 튜브를 머리 가까이에서 사용하지 마십시오.
- 계단을 청소할 경우엔, 반드시 청소기가 사용자보다 아래에 위치해야 합니다.
- 전선이나 호스를 사용하여 진공 청소기를 옮기거나 운반해서는 안 됩니다.
- 본 청소기의 전선이 손상된 경우 보쉬 가전 고객센터에 의해 교체되어야 합니다.
- 제품을 장시간 사용하실 때에는 전선을 최대로 풀어 놓고 사용하시기 바랍니다.
- 콘센트에서 청소기를 분리할 때에는 전선 대신 플러그를 잡아 당깁니다.
- 전선이 날카로운 모서리에 걸리거나 엉키지 않도록 주의하시기 바랍니다.
- 진공 청소기를 사용하기 전 플러그를 당겨 전선을 꺼내 줍니다.
- 손상을 입은 제품은 사용하지 마십시오. 제품에 이상이 발견되면 콘센트에서 즉시 플러그를 뽑아야 합니다.
- 진공 청소기 부품을 교체하거나 수리하는 일은 보쉬 가전 고객센터에 의해서만 진행되어야 합니다.
- 제품이 외부의 추운 날씨와 습기, 열에 노출되지 않도록 유의하십시오.
- 필터(예: 먼지 봉투, 모터 보호 필터, 배기 필터 등)에 가연성 물질이나 알코올을 포함하는 물질을 붓지 마십시오.
- 건축 잔재들을 빨아들일 경우 청소기가 손상될 수 있기 때문에 건축 현장에서 진공 청소기를 사용하는 것은 바람직하지 않습니다.
- 사용하지 않을 때에는 청소기의 전원을 끕니다.
- 수명이 다한 제품은 절대 사용하지 마시고 알맞은 방법으로 폐기 처리하시기 바랍니다.

! 주의

본 제품은 최소한 16A 이상의 퓨즈가 설치된 전원에 연결하여 사용하십시오. 만약 제품의 전원을 켰을 때 단전이 일어나면, 동일 전기회선에 소모전력이 더 큰 다른 제품을 사용하고 있는지 확인하시기 바랍니다. 이런 현상을 방지하려면, 제품을 낮은 단계의 흡입력으로 설정한 상태로 전원을 켜고, 사용 도중에는 파워를 단 한 번만 높여야 합니다.

폐기처리 정보

- **포장재**
  포장재는 제품이 운송 중 입을 수 있는 손상을 방지해 줍니다. 사용된 모든 포장재는 환경 친화적인 물질로 만들어졌기 때문에 재활용이 가능합니다. 더 이상 필요하지 않은 포장은 적절한 재활용 방식에 따라 폐기처리 해주십시오.

- **구제품**
  사용하시던 구제품에 아직 사용할 수 있는 유용한 부품들이 많이 있으므로, 폐기하시기 전에 가까운 판매점이나 재활용 센터에 문의/반납하여 원활한 재활용이 이루어질 수 있도록 합니다. 소매점이나 가까운 동사무소 등에 문의하여 처리 규정을 알아볼 수 있습니다.

- **필터와 먼지 봉투의 폐기처리**
  필터와 먼지 봉투는 친환경적 물질로 제조됩니다. 따라서 필터와 먼지 봉투 모두 생활 폐기물 기준에 적합하지 않은 물질을 포함하지 않는 한, 가정 내 일반 생활 폐기물 방식대로 처리하십시오.

보쉬 BSD3030 진공 청소기의 구매를 축하합니다.
본 사용 설명서는 BSD3030의 다양한 모델을 대상으로 하므로, 일부 기기의 특성과 기능은 고객님이 구매하신 모델에 해당되지 않을 수도 있습니다. 제품을 최상의 상태로 사용하려면 항상 보쉬의 정품 부품을 사용하십시오. 해당 정품 부품은 사용하시는 진공 청소기에 가장 잘 맞게 특별 제작된 제품입니다.
본 사용 설명서를 잘 보관하시기 바랍니다. 만약 진공 청소기를 타인에게 양도할 경우에는 본 사용 설명서도 함께 제공하십시오.

사진 페이지들을 펼쳐 주십시오.



진공 청소기

1. 조절식 플로어 노즐*
2. 흡입관*
3. 결합 노즐*
4. 결합 노즐에 대한 연결 지지대*
5. 길이 조절 파이프*
6. 잠금장치가 있는 길이조절 튜브*
7. 2차 통풍 조절기*
8. 호스 손잡이*
9. 흡입 호스
10. 가구 브러시*
11. 패브릭용 노즐*
12. 코너 노즐*
13. 매트리스 노즐*
14. 하드 플로어 노즐*
15. 전원 코드
16. 흡입력 조절 겸용 전원 스위치*
17. 배기 필터*
18. 파킹 보조 장치
19. 모터 보호 필터
20. 파킹 보조 장치
21. 먼지 봉투
22. 덮개
23. 손잡이
24. 배기 그릴
25. 필터 교체 표시창*

*버전에 따라 다를 수 있습니다.

교체 부품과 액세서리

A **교체 필터 패키지**
- 필터 유형 G(BBZ41FG)
- 최고의 성능: Gplus(BBZ41GPLUS)

내용물:
밀폐 기능이 있는 먼지 봉투 4개
미세 위생 필터 1개

B **섬유 필터 (재사용 가능)** BBZ10TFG
벨크로 접착 방식의 재사용 가능한 필터로 장기간 사용이 가능합니다.

C **HEPA 필터** BBZ8SF1
청정공기 배기를 위한 추가 필터로 알레르기 환자들에게 권장합니다. (매년 교체해야 합니다)

D **패브릭용 터보 유니버셜 브러시** BBZ42TB
가구와 매트리스, 어린이 카시트 등에 사용할 수 있는 일체형의 브러시와 청소기. 특히 애완 동물의 털을 청소하는데 효과적입니다. 브러시 롤러는 진공 청소기의 공기 흡입 기능으로 작동됩니다. 별도의 전기 접속장치 필요 없이 사용 가능합니다.

E **바닥용 터보 유니버셜 브러시** BBZ102TBB
카펫을 비롯한 모든 종류의 바닥에 적합한 일체형의 브러시와 청소기. 특별히 애완 동물의 털을 청소하는데 효과적입니다. 브러시 롤러는 진공 청소기의 공기 흡입 기능으로 작동됩니다. 별도의 전기 접속장치 필요 없이 사용 가능합니다.

F **하드 플로어 브러쉬** BBZ123HD
딱딱한 바닥 청소를 위한 브러시입니다.(마루바닥, 타일, 테라코타 등)

처음 사용하기 전에

그림 1*
흡입 호스를 손잡이에 밀어 고정시킵니다.

제품을 처음 사용할 때

그림 2
a) 흡입 호스 지지대를 흡입구에 고정시킵니다.
b) 흡입 호스를 분리할 때에는, 위 아래의 잠금장치를 동시에 눌러 호스를 빼냅니다.

그림 3*
손잡이와 흡입 호스를 연결시킵니다.

그림 4*
a) 플로어 노즐과 흡입 호스를 연결합니다.
b) 접이식 파이프를 플로어 노즐의 지지대에 끼우고 돌립니다.

그림5*
a) 흡입 호스를 연결합니다.
b) 접이식 파이프를 분리한 후, 화살표 방향으로 조절 버튼/슬라이딩 슬리브를 움직여 원하는 길이로 조절합니다.

그림6*
결합 노즐에 연결 지지대를 끼운 후, 흡입/접이식 파이프에 맞춰 끼웁니다.

그림7
본선의 플러그를 잡은 상태에서, 원하는 길이만큼 당긴 후 콘센트에 플러그를 꽂습니다.

그림8
화살표 방향으로 켜기/끄기(On/Off) 버튼을 눌러 제품의 스위치를 켜거나 끕니다.

그림9*
a) 화살표 방향으로 켜기/끄기(On/Off) 버튼을 돌려 흡입 단계를 설정합니다.
b) 2차 통풍 조절기를 화살표 방향으로 돌림으로써 흡입 성능을 조절할 수 있습니다.
- 2차 통풍구 열림 = 흡입력 줄이기
- 2차 통풍구 닫힘 = 최대 흡입

흡입

그림10
플로어 노즐을 아래와 같이 설정합니다.
- 맞춤 카펫과 카펫
- 부드러운 바닥

주의 !
플로어 툴은 주로 사용하는 바닥면의 유형에 따라 어느 정도 마모될 수 있습니다 (예: 거친 통나무 타일). 따라서 플로어 툴의 바닥면을 정기적으로 점검해야 합니다. 플로어 툴의 바닥면이 마모될 경우, 쪽마루나 리놀륨과 같이 약한 바닥은 손상을 입을 수 있습니다. 마모된 플로어 툴에 의해 생긴 손상에 대해 제조사는 아무런 책임이 없습니다.

그림11*
액세서리의 사용
(필요한 경우, 손잡이나 흡입 호스에 연결합니다.)
a) 결합 노즐: 구석이나 연결 부위, 가구, 커튼 등을 청소할 때
b) 코너 노즐: 구석이나 연결 부위를 청소할 때
c) 패브릭용 노즐: 가구와 커튼 등을 청소할 때
d) 매트리스 노즐: 매트리스와 가구 등을 청소할 때
e) 하드 플로어 노즐: 딱딱한 바닥면(타일, 쪽마루 등)을 청소할 때
f) 가구 브러시: 창틀, 선반, 구획 등을 청소할 때

그림12
청소 중 잠시 쉬고 싶다면 제품의 뒷면에 있는 파킹 보조 장치를 사용합니다. 플로어 노즐의 고리를 청소기 뒷면의 홈으로 밀어 넣습니다.

그림13
계단과 같은 장소를 청소할 경우, 손잡이 두 개를 이용하여 청소기를 옮길 수 있습니다.

청소 작업이 끝났을 때

그림14
a) 콘센트에서 플러그를 뽑습니다.
b) 전선을 살짝 당겼다가 놓으면 전선이 자동으로 감깁니다.

그림15
청소기를 보관하거나 운반할 경우, 제품의 아랫면에 있는 파킹 보조 장치를 사용할 수 있습니다. 청소기를 똑바로 세운 후, 플로어 노즐의 고리를 제품 아랫면의 홈에 밀어 끼웁니다.

필터의 교체

먼지 봉투의 교체

그림16*
먼지 봉투를 교체해야 하는 경우 필터 교체 표시등이 노란색으로 바뀝니다.

그림17
화살표 방향으로 잠금 레버를 눌러 덮개를 엽니다.

그림18
a) 먼지 봉투의 커버 클립을 당겨 먼지 흡입구를 닫은 후, 먼지봉투를 빼냅니다.
b) 홀더 장치에 새 먼지 봉투를 끼웁니다.

! 주의: 덮개는 먼지 봉투가 삽입된 경우에만 닫힙니다. 미세한 먼지 입자(예: 시멘트, 석고 등)를 청소기로 빨아 들였다면, 모터 필터를 청소하고, 필요하다면 마이크로 필터도 교체해야 합니다.

모터 보호 필터의 청소

모터 보호 필터는 먼지를 털어내거나 물로 씻어내는 방식을 통해 정기적으로 청소해야 합니다.

그림19*
- 먼지 봉투 칸의 덮개를 엽니다(그림17 참조).

a) 모터 보호 필터를 화살표 방향으로 당깁니다.
b) 모터 보호 필터의 먼지를 가볍게 털어내 청소합니다.
c) 만약 매우 더럽다면 모터 보호 필터를 물로 씻습니다. 물로 씻은 필터는 최소 24시간 동안 건조시켜야 합니다.

- 청소가 끝나면, 모터 보호 필터를 제품에 끼우고 먼지 봉투 칸의 덮개를 닫습니다.

마이크로 위생 필터의 교체

(HEPA 필터를 갖고 있는 제품의 경우엔 생략)
종이 필터를 교체할 때마다 마이크로 위생 필터도 교체합니다.

그림20*
- 덮개를 엽니다.

a) 필터 홀더 장치를 잡아 당겨서 열어 줍니다.
b) 오래된 마이크로 위생 필터를 분리한 후, 새 마이크로 위생 필터를 끼웁니다.

- 필터 홀더 장치를 끼운 후 덮개를 닫습니다.

배기 필터의 청소

배기 필터는 가볍게 털거나 물로 씻는 등 정기적으로 청소해 주어야 합니다.

그림21*
- 먼지 칸의 덮개를 엽니다(그림17 참조).

a) 필터 프레임을 화살표 방향으로 당깁니다.
b) 배기 필터를 가볍게 두드려 먼지를 털어냅니다.
c) 필터가 매우 더러운 경우 배기 필터를 물로 씻어줍니다. 물로 씻은 필터는 최소 24시간 동안 건조시켜야 합니다.
d) 필터 프레임을 두 개의 작은 턱 아래에 끼운 후, 맞물릴 때까지 화살표 방향으로 밀어 줍니다.

- 먼지 칸의 덮개를 닫습니다.

관리

- 진공 청소기를 청소하기 전에는 반드시 제품의 전원을 끄고 콘센트에서 플러그를 뺍니다. 진공 청소기와 플라스틱 액세서리들은 일반적인 플라스틱 세제를 사용하여 세척할 수 있습니다
- 연마재, 유리 세척제 혹은 다용도 세제를 사용하지 마십시오. 진공 청소기를 물 속에 담그지 마십시오.
- 필요할 경우, 다른 진공 청소기를 사용하여 먼지 칸에 묻은 먼지를 제거하거나, 마른 헝겊 또는 브러시를 이용하여 제품을 청소하십시오.

본 기본 설명서는, 버전이 다를 경우 조금 다르게 적용될 수 있습니다.

제품 품질보증 조건

당사는 다음과 같이 본 제품의 품질 보증을 제공합니다.

1. 본 제품의 품질 보증기간은 소비자가 제품을 구매한 날부터 2년 (24개월) 입니다

2. 구매일자는 구매 확인서 (구매 영수증 또는 카드 내역서 등의 구매 증빙 서류) 에 의해서 확인되며, 구매 확인서가 없는 경우에는 제조일 (FD 번호) 로부터 3개월 경과한 날을 구입일자로 적용하여 품질 보증기간을 기산합니다.

3. 보증 서비스는 공정거래위원회에서 고시한 소비자분쟁해결기준과 당사 엔지니어의 판단에 따라 수리, 교환 또는 환불 처리로 진행이 가능하며, 교환된 제품의 품질 보증기간은 기존 제품의 품질 보증기간을 따릅니다.

4. 수리 도중에 교체되거나 제거된 모든 불량 부품의 권리는 당사에 있습니다.

5. 유상으로 수리된 제품이 3개월 이내에 동일 증상의 불량이 발생한 경우에 한해서 무상 보증이 적용되며, 그 외 부품에 대한 고장은 해당 보증의 대상이 되지 않습니다

6. 보증 서비스가 적용되지 않는 경우

   a. 가정용 제품을 영업용으로 사용하는 경우
   b. 소비자의 취급 부주의 및 사용 설명서 내의 주의사항을 지키지 않아 고장이 난 경우
   c. 천재 지변으로 인해 고장이 난 경우
   d. 제품에서 지정한 전기용량을 틀리게 사용하여 고장이 난 경우
   e. 제품 세척, 소모품 보충, 제품 시연의 경우
   f. 당사나 당사가 인정한 서비스 기관 이외에서 고객의 요청에 의해 제품이 수정/개조되었거나 손상된 경우

7. 당사에 제품 하자로 인한 보증서비스와 관련 없는 서비스를 요청하는 경우에는 품질 보증기간 중이어도 관련 비용이 청구될 수 있습니다.

Please keep this instruction manual. When passing the vacuum cleaner on to a third party, please also pass on this instruction manual.

Intended use

This vacuum cleaner is intended for domestic use and not for commercial use. Only use this vacuum cleaner in accordance with the instructions in this instruction manual. The manufacturer will not accept any responsibility for damage caused by improper use or incorrect operation.
Therefore, please note the following points.
The vacuum cleaner must only be operated with:
- Original replacement parts, accessories or special accessories

In order to prevent injuries and damage, the vacuum cleaner must not be used for:
- Vacuum-cleaning persons or animals
- Vacuuming up:
  - insects or spiders.
  - hazardous, sharp-edged, hot or glowing substances.
  - damp or liquid substances.
  - highly flammable or explosive substances and gases.
  - ash, soot from tiled stoves and central heating systems.
  - toner dust from printers and copiers.

Safety information

This vacuum cleaner complies with the recognised rules of technology and the relevant safety regulations.
- The appliance may be used by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised or have been instructed on the safe use of the appliance and the have understood the potential dangers of using the appliance.
- Children must never play with the appliance.
- Cleaning and user maintenance must never be carried out by children without supervision.
- Plastic bags and films must be kept out of the reach of children before disposal. => Risk of suffocation.

Proper use

- Only connect and use the vacuum cleaner in accordance with the specifications on the rating plate.
- Never vacuum without the dust bag or dust container, motor protection or exhaust filter.
  => This may damage the vacuum cleaner.
- Do not vacuum close to the head when using a nozzle and tube.
  => This could cause injury!
- When vacuuming stairs, the appliance must always be positioned below the user.
- Do not use the power cord or the hose to carry or transport the vacuum cleaner.
- For safety reasons, if this appliance's mains power cable becomes damaged, it must be replaced by the manufacturer, their after-sales service department or a similarly qualified person.
- Fully extend the power cord when using the vacuum cleaner continuously for several hours.
- When disconnecting the appliance from the mains, pull on the plug itself to remove it; do not pull on the power cord.
- Do not pull the power cord over sharp edges or allow it to become trapped.
- Pull out the mains plug before carrying out any work on the vacuum cleaner.
- Do not operate the vacuum cleaner if it is damaged. Unplug the appliance from the mains if a fault is detected.
- For safety reasons, only authorised after-sales service personnel are permitted to carry out repairs and fit replacement parts to the vacuum cleaner.
- Protect the vacuum cleaner from the weather, moisture and sources of heat.
- Do not pour flammable substances or substances containing alcohol onto the filters (dust bag, motor protection filter, exhaust filter, etc.).
- The vacuum cleaner is not suitable for use on construction sites.
  => Vacuuming up building rubble could damage the appliance.
- Switch off the appliance when it is not in use.
- At the end of its life, the appliance should immediately be rendered unusable, then disposed of in an appropriate manner.

! Please note

The mains socket must be protected by at least a 16 amp circuit breaker.
If a circuit breaker is tripped when you switch on the vacuum cleaner, this may be because other electrical appliances which have a high current draw are connected to the same power circuit.
To prevent the circuit breaker from tripping, select the lowest power setting before switching the appliance on, and increase the power only once it is running.

Disposal information

- **Packaging**
  The packaging is designed to protect the vacuum cleaner from being damaged during transportation. It is made of environmentally friendly materials and can therefore be recycled. Dispose of packaging that is no longer required at an appropriate recycling point.

- **Old appliance**
  Old appliances still contain many valuable materials. Therefore, please take appliances that have reached the end of their service life to your retailer or recycling centre so that they can be recycled. For current disposal methods, please enquire at a retailer or your local council.

- **Disposal of filters and dust bags**
  Filters and dust bags are manufactured from environmentally friendly materials. Provided they do not contain substances that are not permitted in household waste, you can dispose of them with your normal household waste.

Congratulations on your purchase of a Bosch BSD vacuum cleaner.
This instruction manual describes various BSD models, which means that some of the equipment features and functions described may not be available on your model.
You should only use original Bosch accessories, which have been specially developed for your vacuum cleaner to achieve the best possible vacuuming results.

Please keep this instruction manual in a safe place. If you pass the vacuum cleaner on to someone else, please also pass on this instruction manual.

Fold out picture pages.



Your vacuum cleaner

1 Adjustable floor nozzle*
2 Suction pipe*
3 Combination nozzle*
4 Attachment support for the combination nozzle*
5 Telescopic pipe*
6 Locking button / sliding sleeve*
7 Secondary air regulator*
8 Hose grip*
9 Suction hose
10 Furniture brush*
11 Upholstery nozzle*
12 Corner nozzle*
13 Mattress nozzle*
14 Hard floor nozzle*
15 Mains cable
16 On / off switch with electronic suction regulator*
17 Exhaust filter*
18 Parking aid
19 Motor protection filter
20 Storing aid
21 Paper filter
22 Lid
23 Handle
24 Exhaust grid
25 Filter change display*

*Depending on version

Replacement parts and accessories

A Replacement filter pack
- Filter type G (BBZ41FG)
- For best performance: Gplus (BBZ41GPLUS)

Contents:
4 filter bags with seal
1 micro-hygiene filter
http://www.dust-bag-bosch.com

B Textile filter (long-term filter) BBZ10TFG
Reusable filter with Velcro fastening.

C HEPA Filter BBZ8SF1
additional filter for pure exhaust air.
Recommended for those with allergies.
Replace every year.

D TURBO-UNIVERSAL®-upholstery brush BBZ42TB
Simultaneously brush and vacuum upholstered furniture, mattresses, car seats, etc..
Particularly suitable for vacuuming animal hair and fur.
The brush roller is driven by the suction force of the vacuum cleaner.
No electrical connection required.

E TURBO-UNIVERSAL®- floor brush BBZ102TBB
Simultaneously brush and vacuum short-pile carpets and fitted carpets or any kind of covers. Particularly suitable for vacuuming animal hair and fur. The brush roller is driven by the suction force of the vacuum cleaner.
No electrical connection required.

F Hard floor nozzle BBZ123HD
For vacuuming hard floors
(parquet, tiles, terracotta, etc.)

Before using for the first time

Illustration 1*
Push the handle onto the flexible tube and until it engages.

Starting up

Illustration 2
a) Lock the suction hose supports into the suction opening. When removing the suction hose, press together both latches and pull out the hose.

Illustration 3*
Connect the handle and the suction hose.

Illustration 4*
a) Connect the floor nozzle and the suction hose.
b) Insert the telescopic pipe into the supports of the floor nozzle and secure by turning.

Illustration 5*
a) Connect the suction hoses.
b) Unlock the telescopic pipe and adjust to the desired length by moving the adjusting button / sliding sleeve in the direction of the arrow.

Illustration 6*
Slide the attachment support on to the combination nozzle and clip on to the suction / telescopic pipe

Illustration 7
Take the mains cable by the plug and pull out the desired length and then plug in to the mains socket.

Illustration 8
Switch on / off the vacuum cleaner by pressing the on / off button in the direction of the arrow.

Illustration 9*
a) Set the level of suction by turning the on / off button in the direction of the arrow.
b) The suction performance can also be regulated by turning the secondary air regulator in the direction of the arrow.
- Secondary air opening open
  - Suction reduced
- Secondary air opening closed
  - Maximum suction

Suction

Illustration 10
Setting the floor nozzle:
- fitted carpets and carpets
- smooth floors

Caution!
Floor tools are subject to a certain amount of wear, depending on the type of hard floors you have (e.g. rough, rustic tiles). Therefore, you must check the underside of the floor tool at regular intervals. Worn undersides of floor tools may have sharp edges that can damage sensitive hard floors, such as parquet or linoleum. The manufacturer does not accept any responsibility for damage caused by worn floor tools.

Illustration 11*
Vacuuming with accessories
(connect to the handle or the suction hose as required)
a) Combination nozzle
For vacuuming in corners, joins, upholstery, curtains etc.
b) Corner nozzle
For vacuuming in corners and joins
c) Upholstery nozzle
For vacuuming upholstery, curtains etc.
d) Mattress nozzle
For vacuuming mattresses, upholstery etc.
e) Hard floor nozzle
For vacuuming hard floor surfaces (tiles, parquet etc.)
f) Furniture brush
To vacuum window frames, cupboards, sections etc..

Illustration 12
When taking brief vacuuming pauses, you can use the parking aid on the back of the appliance. Push the hook on the floor nozzle in to the recess on the back of the appliance.

Illustration 13
When vacuuming, e.g. stairs, the appliance can also be carried using the two grips.

After work

Illustration 14
Pull out the mains plug.
Pull briefly on the mains cable and then let go (the cable rolls up automatically).

Illustration 15
To store / transport the appliance, you can use the storing aid on the underside of the appliance. Stand the appliance up straight. Push the hook on the floor nozzle in to the recess on the underside of the appliance.

Changing the filter

Replace the dust bag

Illustration 16*
The filter change display on the lid turns yellow.

Illustration 17
Open the covering by pressing the adjusting lever in the direction of the arrow.

Illustration 18
a) Close and remove the dust bag by pulling on the cover clips.
b) Insert the new dust bag in the holding fixture, up to the stop.

! Attention: Cover will only close if a paper filter is inserted!
• After vacuuming fine dust particles (e.g. cement, plaster, etc.), clean the motor filter and replace the microfilter if necessary.

Cleaning the motor protection filter
The motor protection filter should be cleaned regularly by knocking out the dirt and rinsing.

Illustration 19*
■ Open the dust bag compartment lid (see Figure 17).
a) Pull out the motor protection filter in the direction of the arrow.
b) Clean the motor protection filter by tapping it.
c) If it is very dirty, the motor protection filter should be rinsed.
The filter must then be left to dry for at least 24 hours.
■ After cleaning, slide the motor protection filter into the vacuum cleaner and close the dust bag compartment lid.

*Depending on equipment

Replacing the hygiene microfilter

(Omitted on vacuum cleaners which have a HEPA filter).
When should I change the filter? Each time a new paper filter pack is fitted.

Illustration 20*
■ Open the covering.
■ Pull out the filter holding fixture and open up.
■ Dispose of the old hygiene microfilter and insert a new hygiene microfilter.
■ Slide the filter holding fixture in and close the covering.

Cleaning the exhaust filter

The exhaust filter should be cleaned regularly by tapping out and rinsing.

Illustration 21*
■ Open the dust compartment lid (see Fig. 17).
a) Pull out the filter frame in the direction of the arrow.
b) Tap the dirt out of the exhaust filter.
c) If it is very dirty, the exhaust filter should be rinsed.
The filter must then be left to dry for at least 24 hours.
d) Slide the filter frame under the two retaining ribs and push in the direction of the arrow until it engages.
■ Close the dust compartment lid.

Maintenance

■ Before the appliance is cleaned, ensure that it has been switched off and the mains plug removed.
■ Vacuum cleaners and accessories made of plastic can be cleaned using a general commercial plastic cleaner.

! Do not use scouring agents, glass or all-purpose • cleaners. Never immerse the vacuum cleaner in water!

■ If necessary, the dust section can be cleaned using another vacuum cleaner, or simply cleaned out using a dry dust cloth / dust brush.

Subject to technical change without notice.

고객 서비스 센터

Bosch 가전에 대해 궁금한 점이 있으시면
Bosch 가전 고객센터 또는 홈페이지를 통해 문의하시기 바랍니다.
전화번호: 1661-8544
홈페이지: www.bosch-home.co.kr